


Fig.1: Welcome mode; Country and Language setting

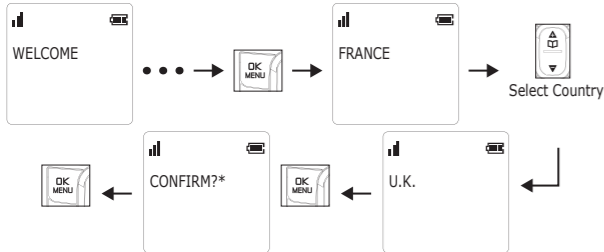

In case of wrong selection please refer to the table 1.

ENGLISH

BEFORE 1st USE

Connecting your phone:

- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in Handset
- After first time power up (base unit is connected to AC mains), welcome mode (country) will appear on the screen (Fig.1).

Before you start to use your telephone, charge batteries continuously for 15 hours.

! only use plug adapter supplied with the unit and rechargeable batteries with your phone.

Handset / Base Station Keys

- OK/Menu key**
- Back/ Intercom key**
- Navigation key
- Hang-up/Exit key**
- ** key** - In idle mode: Press to insert **: Press and hold to access the call list.
- 0 key** - During a call: Press and hold to insert a flash (R).
- * key** - In idle mode: Press to insert *: Press and hold to access the redial list.
- M1, M2 key** - In idle mode/during a call: Press to dial pre-recorded number stored in direct mem.
- 📞 key***
In standby mode: Press to direct access to the Call Blocking menu.
* To block calls, it is necessary to subscribe to the Calling Number Presentation service. Contact your landline operator.
- Talk key / Loudspeaker**
- Paging key** - To locate handset / to start registration procedure.
- ▲**
Increase (+) speaker volume during message playback.
- Answering machine message indicator**
0F-> -- When answering machine is OFF
0n-> XX When answering machine is ON where XX is number of messages in TAM memory
00 Steadily ON: No voice messages in TAM
XX Flash: There are XX new voice messages received where XX is from 01 to 59
ZZ Steadily ON: There are ZZ old voice messages kept in the TAM memory (no new voice messages)
XX/FF Flash XX alternatively with FF: There are XX new voice messages received where XX is from 01 to 59 and the TAM memory is full
Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory
- /XX Flash XX alternatively with - -: Time is not set and there are XX new voice messages received where XX is from 01 to 59
- - -Flash - -: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)
XX Steadily ON: Playing the current XX incoming old message
Flash: Playing the current XX incoming new message
A1/A2 Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM
XX/An Flash XX alternatively with An: XX new incoming message is now recording. An denotes that the incoming message recording is in progress
rA Flash: Remote access is in progress
LX Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic)
- 📞**
Press to turn on the answering machine
Press again to turn off the answering machine
- ▶■**
Press to play the message
Press again to stop the message playback

- ▶**
Press to skip the current message and play the next message
- 📞**
Press once to delete the message during playback
Press and hold to delete all the messages
Note: New voice messages will not be deleted
- ◀**
Press to repeat playing the current message from the beginning
Press twice to skip backward to the previous message
- 🔊**
Decrease (-) speaker volume during message playback

*Subject to subscription and availability of the service from the fixed line operator.

Display icons

- 📞** Indicates that the Call Blocking function is activated.
- 🔋** Indicates battery is fully charged.
- 🔋** Indicates battery is fully discharged.
- 📞** Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
- 📞** Indicates you have a new voice mail message*.
- 📞** Indicates you have new missed calls*.
- 🔔** Displays when the alarm clock is activated.
- 📞** Displays when handsfree is activated.
- 📞** Indicate when the telephone answering machine (TAM) is turned on. Flash when new TAM messages are received.
- 📞** Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.

Using the phone

Receive and end a call

- 📞 / 📞

Make a call

- 📞 either before or after dialing your number
- From redial list: Press and hold * / 📞 or 📞 / 📞.
- From call log list*: Press and hold ## / 📞 or 📞 / 📞.

Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.

- From direct memories: Press M1 or M2: long press on **KEY 1** or **KEY 2** or **KEY 3** in idle mode.
- From phonebook: 📞 / 📞 or 📞 / 📞.
- During a call, to activate/desactivate handsfree: 📞.
- To make an internal call
- If only 2 registered handsets: C_{INT}.
- If more than 2 registered handsets: C_{INT} / 📞 or 📞 / select handset number / 📞.
- To ring all handsets to intercom: C_{INT} / 📞 or 📞 select CALL ALL / 📞.

To make a three-party conference call:

During call:

- Press 📞 / select **INTERCOM** / 📞 or 📞 / select handset number / 📞.
- Press 📞 on the called handset to answer.
- Long press * on the calling handset to establish conference call.

Phonebook settings: 100 entries

To register in phonebook

- 📞 / 📞 or 📞 to select **PHONEBOOK** / 📞 / 📞 / select **ADD** / enter name of contact / 📞 / 📞 / enter number of contact / 📞 / 📞 or 📞 to select melody / 📞 / 📞 to save as VIP or C_{INT} to save as CONTACT.

Notes:

- ! appears in the end of name of VIP entry.
- Phonebook is stored in base unit which is shared with duo, trio handsets.

To register the direct memories in keys M1, M2, 1, 2 & 3

- 📞 / 📞 or 📞 select **HS SETTINGS** / 📞 / 📞 or 📞 select **DIRECT MEM** / 📞 / 📞 or 📞 select **M1** or **M2**: 📞 / edit or enter the name / 📞 / edit or enter the number / 📞 / 📞 or 📞 to select melody / 📞 to save as VIP or C_{INT} to save as CONTACT.

KEY 1 or **KEY 2** or **KEY 3**: 📞 / edit or enter the number / 📞.

General settings

This phone can be customized according to your preferences, to access the different possibilities, press: 📞.

- To customize handset (name, melody, language (table 1),...): 📞 or 📞 select **HS SETTINGS** / 📞.
- To change PIN, registration handset, reset: 📞 or 📞 select **BS SETTINGS** / 📞.

Answering machine setting

Answering machine operation by handset

Turn the answering machine on or off

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 / 📞 or 📞 to select **TAM ON/OFF** / 📞 or 📞 to select **ON** or **OFF** / 📞.

Set the answer mode

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 / 📞 or 📞 to select **TAM SETTINGS** / 📞 to select **ANSWER MODE** / 📞 or 📞 to select **ANSWER ONLY** or **ANS & REC** / 📞.

Record a personalised outgoing message

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 / 📞 or 📞 to select **TAM SETTINGS** / 📞 to select **OGM SETTINGS** / 📞 or 📞 to select **ANSWER ONLY** or **ANS & REC** / 📞 or 📞 to select **RECORD MESS** / 📞 to start recording / 📞 to end recording.

Playback and delete messages

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 to select **MSG PLAYBACK** / 📞 to start playback.

- During message playback you can press 📞, then 📞 or 📞 to select options to DELETE the current message.

Set ring delay

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 / 📞 or 📞 to select **TAM SETTINGS** / 📞 to select **ANSWER DELAY** / 📞 or 📞 to select **2 - 8 RINGS** or **TIME SAVER** / 📞.

To check messages remotely

- Dial your home phone number/while the answering machine playing greeting message, press * and enter remote access code (master PIN code 0000).

The remote feature lets you perform the following functions:

To	Press this button
Play back messages	5
Repeat message	4
Erase message	2 (during message playback)
Skip message	6
Turn on answerer	7
Turn off answerer	9

Set the OGM voice language

- 📞 / 📞 or 📞 to select **ANS. MACHINE** / 📞 / 📞 or 📞 to select **TAM SETTINGS** / 📞 / 📞 or 📞 to select **TAM LANGUAGE** / 📞 / 📞 or 📞 to select your preferred language / 📞.

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring. Default setting of Smart Call Block in this telephone is OFF but you can enable it via your phone settings, as explained in the following paragraphs.

*This feature requires a subscription of Caller Line Identification service from your telephone service provider.

CALL BLOCK OVERVIEW

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to Manual. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
CONTACTS	In this automatic mode, any number not registered to your phonebook will be automatically blocked and not cause your phone to ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/missed calls (to enable, see part 2.1).
VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and cause your phone to ring. Any other number will not ring. When this mode is chosen, VIPS OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see part 2.2)
ANONYME	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to enable, see part 3)

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers registered in your blacklist will be blocked.

You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing and before answering, press 📞.

It will terminate the call and offer you the option to register the number to the blacklist in one click.

Then to confirm the registration of this number in the blacklist, press < 📞 >. IMPORTANT: if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK
			CONTACTS OK

Press < 📞 >, press < 📞 > or < 📞 > to select **CALL BLOCK**.

Press < 📞 >, press < 📞 > or < 📞 > to select **BLOCK SET**.

Press < 📞 >, press < 📞 > or < 📞 > to select **ON** (manual mode).

OR

In idle mode, press 📞 to access **BLOCK SET**. directly.

After you enable this option, the call block icon 📞 will be displayed on the LCD.

1.2. Add numbers to Blacklist

In idle mode,

- Press < 📞 > key, **BLOCK SET.** is displayed, or Press < 📞 > to press < 📞 > or < 📞 > to select **CALL BLOCK**, press < 📞 > to show **BLOCK SET**.
- Press < 📞 > or < 📞 > to select **BLACKLIST**.
- Press < 📞 >, press < 📞 > or < 📞 > to select **ADD**, enter number to be blocked, press < 📞 > to save.

NOTE: 2 more ways to add incoming and outgoing call numbers in Block list:

- From incoming call numbers
 - Press < 📞 >, press < 📞 > or < 📞 > to select **CALL LIST**, or long press < ## >.
 - Press < 📞 >, press < 📞 > or < 📞 > to select call list entry.
 - Press < 📞 >, press < 📞 > or < 📞 > to select to **ADD to BLIST**.
 - Press < 📞 > to show selected number, press < 📞 > to save to Block list.

2. From outgoing call numbers

- Long press < * >, press < 📞 > or < 📞 > to select redial list entry.
- Press < 📞 >, press < 📞 > or < 📞 > to select to **ADD to BLIST**.
- Press < 📞 > to show selected number, press < 📞 > to save to Block list.

1.3. Edit numbers in Blacklist

In idle mode,

- Repeat step 1 and 2 in Section 1.2.
- Press < 📞 >, press < 📞 > or < 📞 > to select **EDIT**, press < 📞 > or < 📞 > to select number to be edited, press < 📞 > to edit, and then press < 📞 > to save.

1.4. Delete numbers in Blacklist

1.4.1. Delete a number from blacklist

In idle mode,

- Repeat step 1 and 2 in Section 1.2.
- Press < 📞 >, press < 📞 > or < 📞 > to select **DELETE**, press < 📞 > or < 📞 > to select number to be deleted, press < 📞 > to confirm.

1.4.2. Delete all numbers from blacklist

In idle mode,

- Repeat step 1 and 2 in Section 1.2.
- Press < 📞 >, press < 📞 > or < 📞 > to select **DELETE ALL**, press < 📞 >, **CONFIRM?** is shown, and then press < 📞 > to confirm.

2. Automatic call block mode

2.1. VIPs only

In this restrictive automatic mode, only calls from numbers registered as VIP in your phonebook will go through and make your phone ring.

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK*
			CONTACTS OK

Press < 📞 >, press < 📞 > or < 📞 > to select **CALL BLOCK**.

Press < 📞 >, press < 📞 > or < 📞 > to select **BLOCK SET**.

Press < 📞 >, press < 📞 > or < 📞 > to select **VIP OK** (Automatic mode).

2.2. Contacts only

In this broad automatic mode, only calls from contacts registered in your phonebook (normal and VIP) will go through and make your phone ring.

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK
			CONTACTS OK

Press < 📞 >, press < 📞 > or < 📞 > to select **CALL BLOCK**.

Press < 📞 >, press < 📞 > or < 📞 > to select **BLOCK SET**.

Press < 📞 >, press < 📞 > or < 📞 > to select **CONTACTS OK** (Automatic mode).

3. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

MENU	CALL BLOCK	BLOCK ANONYM	PRIVATE*
			ALL
			OFF

Press < 📞 >, press < 📞 > or < 📞 > to select **CALL BLOCK**.

Press < 📞 >, press < 📞 > or < 📞 > to select **BLOCK ANONYM**.

Press < 📞 >, press < 📞 > or < 📞 > to select one of the options.

3.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you.

In idle mode,

- Press < 📞 > key, **BLOCK SET.** is displayed, or Press < 📞 > to press < 📞 > or < 📞 > to select **CALL BLOCK**, press < 📞 > to show **BLOCK SET**.
- Press < 📞 > or < 📞 > to select **BLOCK ANONYM**.
- Press < 📞 >, press < 📞 > or < 📞 > to select **PRIVATE**, press < 📞 > to confirm.
- 📞 will be displayed on the lower side of LCD.

3.2. Block All Anonymous Calls

This mode will block all incoming calls, including private calls, international calls, pay phone and other out-of-area calls.

In idle mode,

- Repeat step 1 and 2 in Section 3.1.
- Press < 📞 >, press < 📞 > or < 📞 > to select **ALL**, press < 📞 > to confirm.
- 📞 will be displayed on the lower side of LCD.

3.3. Set Block Anonymous Calls OFF

In idle mode,

- Repeat step 1 and 2 in Section 3.1.
- Press < 📞 >, press < 📞 > or < 📞 > to select **OFF**, press < 📞 > to confirm.
- 📞 will only disappear from the LCD if the regular call block (see 1. And 2.) is also set to OFF.

Table 1: Country and language selection menu

1. 📞 / 📞 or 📞 /HS SETTINGS/ 📞

EN	DE	FR	IT	ES	EL
HS SETTINGS	MT-EINSTEL.	REGL. COMB	IMPOSTA PORT	CONF. TELEF.	ΠΥΘΜΕΣΙΣ ΑΚ
PT	RU	NL	PL	RO	SRB
CONFIG. TERM	ОПЦИИ ТРУБКИ	HANDESET INST	USTAW WŁASNE	PROGR PERS	PERSONALIZ.
HU					
K.B. BEALLIT					

2. 📞 or 📞 /LANGUAGE/ 📞 or 📞 / 📞

EN	DE	FR	IT	ES	EL
LANGUAGE	SPRACHE	LANGUE	LINGUA	IDIOMA	ΓΛΩΣΣΑ
PT	RU	NL	PL	RO	SRB
IDIOMA	ЯЗЫК	TAAL	JĘZYK	LIMBA	JEZIK
HU					
NYELV					

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries. For more information, you can download full user guide or get on-line assistance www.alcatel-home.com

SAFETY

This telephone is not designed for Emergency calls when the main power fails.

Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition.