
F860 VOICE / F860 VOICE DUO / **F860 VOICE TRIO**



User Guide www.alcatel-home.com

Fig.1

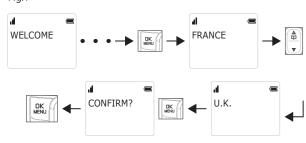

1 .□K. / ♠ or ▼ /HS SETTINGS/.□K

MENO , CO STATE OF THE					
EN	DE	FR COMP	IT INTROCETA BODE	ES	EL DVOLUEELE ALC
HS SETTINGS	MT-EINSTEL.	REGL. COMB	IMPOSTA PORT	CONF TELEF.	ΡΥΘΜΙΣΕΙΣ ΑΚ
PT	RU	NL	PL	RO	SRB
CONFIG. TERM	ОПЦИИ ТРУБКИ	HANDSET INST	USTAW WŁASNE	PROGR PERS	PERSONALIZ.
HU					
K.B. BEALLIT					

2 A or \(\begin{align} / \text{ANGUAGE} \) A or \(\begin{align} / \text{DK} \)

MENU MENU					
EN	DE	FR	IT	ES	EL
LANGUAGE	SPRACHE	LANGUE	LINGUA	IDIOMA	ΓΛΩΣΣΑ
PT	RU	NL	PL	RO	SRB
IDIOMA	язык	TAAL	JĘZYK	LIMBA	JEZIK
HU					

ENGLISH

BEFORE 1ST USE Connecting your phone:


- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical
- Insert batteries in Handset.
- After first time power up (base unit is connected to AC mains), welcome mode (country) will appear on the screen (Fig.1).

Before you start to use your telephone, charge batteries continuously for 15

▲ Use only plug adapter and rechargeable batteries supplied with your nhone

GETTING TO KNOW YOUR PHONE

Handset Overview

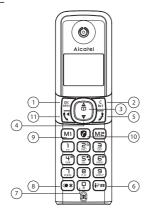

1 OK MENU In idle mode: Press to access the main menu In sub-menu mode: Press to confirm the selection During a call: Press to access Intercom/Phonebook Redial List/Call List

2 L INT

In main menu mode: Press to go back to idle screen In sub-menu mode: Press to go back to previous level In sub-menu mode: Press and hold to go back to idle screen In editing/predialing mode: Press to clear a character/digit In editing/predialing mode: Press and hold to delete all the characters/digits

In idle mode: Press to access the call list In menu mode: Press to scroll up the menu items In Phonebook list/Redial list/Call List: Press to scroll up the list During a call: Press to increase the volume In ringing: Press to increase the ringer volume

(4) ▼

In idle mode: Press to access the redial list In menu mode: Press to scroll down the menu items In Phonebook list/Redial list/Call list: Press to scroll down the list During a call: Press to decrease the volume In ringing: Press to decrease the ringer volume

(5) **}**

During a call: Press to end a call and go back to idle screen In menu/editing mode: Press to go back to previous menu

(6) **#**

In idle mode: Press and hold to access the call list

During a call: Press and hold to insert a Flash (R)

8 *

In idle mode: Press and hold to access the redial list

(9) DIRECT MEMORY KEYS M1, M2

In idle mode / during a call: Press M1 or M2 to dial pre-recorded number stored in direct mem


10 7*

In idle mode: Direct access to the Call Block menu

During a call: Press to activate/deactivate the speaker mode In idle / pre-dialing mode: Press to make a call In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list During ringing: Press to answer a call

* Subject to subscription and availability of the CLI service from the fixed line operator.

Base Station Overview

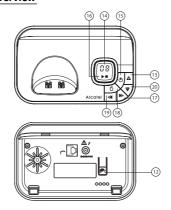

12 (

Press on the base station to page your handset. It will ring for approximately 60 seconds

Press and hold on the base station for about five seconds, the base station is entered into registration mode and allows handset registration

Increase (+) speaker volume during message playback

(14) DISPLAY

OF-> -- When answering machine is OFF.

On-> XX When answering machine is ON where XX is number of messages in TAM memory.

Steadily ON: No voice messages in TAM. XX Flash: There are XX new voice messages received.

ZZ Steadily ON: There are ZZ old voice messages kept in the TAM memory (no new voice messages).

Flash XX alternatively with FF: There are XX new voice

messages received and the TAM memory is full. Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory.

Flash - -: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)

Steadily ON: Playing the current XX incoming old message. Flash: Playing the current XX incoming new message.

Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM. Flash XX alternatively with An: XX new incoming message is

now recording. An denotes that the incoming message recording is in progress

Flash: Remote access is in progress. Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic).

(15) **(**

Press to turn on the answering machine.

Press again to turn off the answering machine.

16 ▶■

Press to play the message Press again to stop the message playback.

17 >

Press to skip the current message and play the next message.

18 0

Press once to delete the current message.

Press and hold to delete all the messages.

(19) ≪ Press to repeat playing the current message from the beginning.

Press twice to skip backward to the previous message. 20 ₹

Decrease (-) speaker volume during message playback.

Display Icons and Symbols

Indicates that the Call Blocking function is activated

Indicates the battery is fully charged

Indicate when the battery is fully discharged

Indicates that an external call is connected or held

Tindicates you have a new voice mail message*

Indicates you have a new missed calls*

Δ Displays when the alarm clock is activated

ı Displays when handsfree is activated

Indicates when the answering machine (TAM) is turned on Flashes when new TAM messages are received

Icon blinks when the handset is out of range or is searching for a base

Indicates that the handset is registered and within range of the base

USING THE PHONE

Received and end a call

- **じ/**チ Make a call

During call:

- t either before or after dialing your number
- From redial list: Press and hold */ ♠ or ▼ / ੯.
- From call log list*: Press and hold #/ ♠ or ▼ / ੯.
- From direct memories: long press on **KEY 1 or KEY 2 or KEY 3 or M1 or M2** in idle mode. - From phonebook: ▲ / ▲ or ▼ / ™ENU.
- During a call, to activate/desactivate handsfree: 🕻 .

To make an internal call

- If only 2 registered handsets: E/INT.
- If more than 2 registered handsets: C/INT / ♠ or ▼ select the handset number / MRNJ
- To ring all handsets to intercom: C/INT / ♠ or ▼ select CALL ALL / MENU.

To make a three-party conference call:

- Press MENI / select INTERCOM / MENI / ♠ or ▼ select handset number / MENI
- Press to on the called handset to answer.
- Long press * on the calling handset to establish conference call.

PHONEBOOK SETTINGS: 100 ENTRIES

To register in phonebook

OK / enter number of contact / OK / select melody / OK / OK to save as **VIP** or C/INT to

- -! appears in the end of name of VIP entry.
- Phonebook is stored in base unit which is shared with duo, trio handsets.

To register the direct memories in keys M1,M2, 1, 2 & 3 $^{
m DK}_{
m MENU}$ / f A or f V select **HS SETTINGS** / $^{
m DK}_{
m MENU}$ / f A or f V select **DIRECT MEM** / $^{
m DK}_{
m MENU}$ / f A or f Vselect M1 or M2, KEY 1 or KEY 2 or KEY 3 / $_{\rm MENU}^{\rm DK}$ / edit or enter the number / $_{\rm MENU}^{\rm DK}$

GENERAL SETTINGS

This phone can be customized according to your preferences, to access the different possibilities press: OK ...

- To customize handset (name, melody, language (Table 2),...): A or ▼ select HS SETTINGS / DK
- To change PIN, registration handset, reset: ▲ or ▼ select BS SETTINGS / MENU.

ANSWERING MACHINE

Settings through the Handset

Turn On/Off the Answering Machine

- Press ^{OK} and A or ▼ to select ANS. MACHINE.
- Press ^{DK}_{MENU} and ▲ or ▼ to select TAM ON/OFF.
- 3. Press ^{OK} and ▲ or ▼ to select **ON** or **OFF.**
- 4. Press OK to confirm.

Set the Answer Mode

- Press ^{DK}_{MENI} and ▲ or ▼ to select ANS. MACHINE.
- Press ^{DK}_{MENI} and ▲ or ▼ to select TAM SETTINGS.
- Press ^{DK}_{MENU} and ▲ or ▼ to select ANSWER MODE.
- 4. Press ok and ▲ or ▼ to select ANS & REC or ANSWER ONLY. 5. Press at to confirm.

- Record your own outgoing message (OGM)
- Press ^{OK}_{MENU} and ▲ or ▼ to select ANS. MACHINE. Press ^{OK}_{MENU} and ▲ or ▼ to select TAM SETTINGS.
- 3. Press and ♠ or ▼ to select OGM SETTINGS.
- 4. Press ^{DK}_{MENU} and ▲ or ▼ to select ANS & REC or ANSWER ONLY. Press ^{OK}_{MENU} and ▲ or ▼ to select RECORD MESS.
- 6. Press use to start recording.
- 7. Press OK to stop recording.

Playback and Delete the Outgoing Message (OGM)

- Press ^{OK}_{MENI} and ▲ or ▼ to select ANS. MACHINE.
- 2. Press OK and △ or ▼ to select MSG PLAYBACK.
- 3. Press OK to start message playback.
- 4. During message playback, select ^{DK}_{MENU} and △ or ▼ if you're happy with it or vou can delete.

Set the Answer Delay

- Press OK and ▲ or ▼ to select ANS. MACHINE.
- Press OK and A or ▼ to select TAM SETTINGS.
- Press ^{DK}_{MENU} and ▲ or ▼ to select ANSWER DELAY.
- 4. Available options: 2 8 RINGS or TIME SAVER. 5. Press DK to confirm.

Remote Access

- 1. Dial your phone number.
- 2. When you hear your outgoing message, press * and enter your 4-digit remote access PIN (master PIN 0000).
- 3. Follow the voice prompts as below:

Action	Key
To replay the current message	5
Repeat playing the current message from	4
the beginning	
Delete the message	2 (During playback)
Skip the current message	6
To set Answer machine ON	7
To set Answer machine OFF	9

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone

CALL BLOCK OVERVIEW

Default setting of Smart Call Block in this telephone is OFF but you can enable it via your phone settings, as explained in the following paragraphs.

telephone service provider.

*This feature requires a subscription of Caller Line Identification service from your

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to Manual. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / o after a call (to enable, see part 1).
CONTACTS	In this automatic mode, any number not registered to your phonebook will be automatically be blocked and not cause your phone to ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/ missed calls (to enable, see part 2.1).
VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and cause your phone to ring. Any other number will not ring. When this mode is chosen, VIPS OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see part 2.2).
ANONYMOUS	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers <u>registered</u> in your <u>blacklist</u> will be blocked. You can add/remove numbers from that list at any time.

When the phone is ringing and before answering, press ${\bf 7}$. It will terminate the call and offer you the option to register the number to the blacklist in one

enable, see part 3).

Then to confirm the registration of this number in the blacklist, press or IMPORTANT: if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode

How to block an incoming call:

MENU TE CALL BLOCK TE BLOCK SET. OFF ON VIP OK CONTACTS OK

Press ^{OK}_{MENU}, press ▲ or ▼ to select **ON** (manual mode) In idle mode, press **a** to access **BLOCK SET.** directly.

Press ^{□K}_{MENU} , press ▲ or ▼ to select Call Block

Press OK press ▲ or ▼ to select Block set

After you enable this option, the call block icon 🕜 will be displayed on the

1.2. Add numbers to Blacklist

In idle mode

1. Press key, **BLOCK SET.** is displayed, or Press ok to press ▲ or ▼ to select CALL BLOCK, press ok to show

BLOCK SET. 2. Press ♠ or ▼ to select BLOCKLIST.

3. Press ^{□K}_{MENL}, press ▲ or ▼ to select ADD, enter number to be blocked, press OK to save.

NOTE: 2 more ways to add incoming and outgoing call numbers in Block list: 1. From incoming call numbers

- Press OK , press △ or ▼ to select CALL LIST or press and hold #
- Press OK , press ▲ or ▼ to select call list entry. - Press OK , press ▲ or ▼ to select to ADD to BLIST.
- Press OK to show selected number, press OK to save to **Block list.**
- 2. From outgoing call numbers
- Press ★ , press ▲ or ▼ to select redial list entry.
- Press OK press A or ▼ to select to ADD to BLIST.
- Press DK to show selected number, press DK to save to **Block list.**

1.3. Edit numbers in Blacklist

In idle mode.

1. Repeat step 1 and 2 in Section 1.2.

2. Press OK press ♠ or ▼ to select EDIT,

press ♠ or ▼ to select number to be edited, press of to edit, and then press ok to save.

1.4. Delete numbers in Blacklist

1.4.1. Delete a number from blacklist

In idle mode.

- 1. Repeat step 1 and 2 in Section 1.2.
- 2. Press $^{\mathrm{OK}}_{_{\mathrm{MENU}}}$, press $_{\mathrm{A}}$ or $_{\mathrm{f \nabla}}$ to select **DELETE**, press $_{\mathrm{A}}$ or $_{\mathrm{f \nabla}}$ to select number to be deleted, press OK ...

1.4.2. Delete all numbers from blacklist


In idle mode.

- 1. Repeat step 1 and 2 in Section 1.2.
- 2. Press ok , press ♠ or ♥ to select DELETE ALL, press ok , CONFIRM? is shown, and then press ok to confirm.

2. Automatic call block mode

2.1. VIPs only

In this restrictive automatic mode, only calls from numbers registered as VIP in your phonebook will go through and make your phone ring.

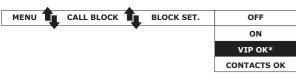

Press OK press ▲ or ▼ to select Call Block

Press ^{□K}_{MENII}, press ▲ or ▼ to select **Block set**

Press OK (Automatic mode)

Press OK (Automatic mode)

2.2. Contacts only

In this broad automatic mode, only calls from contacts registered in your phonebook (normal and VIP) will go through and make your phone ring.

MENU 🕕 CALL	. вьоск	BLOCK SET.	OFF
•	•		ON
			VIP OK
			CONTACTS OK

Press ^{□K}_{MENIL}, press ▲ or ▼ to select Call Block

Press OK , press ▲ or ▼ to select Block set

Press $_{\text{\tiny{MENU}}}^{\text{\tiny{DK}}}$, press Δ or lacktriangledown to select **Contacts OK** (Automatic mode)

3. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous



Press ^{OK}_{MENU} , press ▲ or ▼ to select **Call Block**

Press ^{OK}_{MENU} , press ▲ or ▼ to select **Block anonym**

Press $_{\text{MENU}}^{\text{OK}}$, press \triangle or \triangledown to select one of the options

3.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you. In idle mode

- 1. Press key, **BLOCK SET.** is displayed, or Press ok to press ▲ or ▼ to select CALL BLOCK, press ok to show BLOCK SET.
- 2. Press **△** or **▼** to select **BLOCK ANONYM.**
- 3. Press OK press ▲ or ▼ to select PRIVATE, press OK menu to confirm.
- 4. will be displayed on the lower side of LCD.

3.2. Block All Anonymous Calls

This mode will block all incoming calls, including private calls, international calls, pay phone and other out-of-area calls. In idle mode,

- 1. Repeat step 1 and 2 in Section 3.1.
- 2. Press OK press △ or ▼ to select ALL, press OK to confirm.
- 3. will be displayed on the lower side of LCD.

3.3. Set Block Anonymous Calls OFF

In idle mode, 1. Repeat step 1 and 2 in Section 3.1.

- 2. Press ^{OK}_{MENU}, press ▲ or ▼ to select **OFF**, press ^{OK}_{MENU} to confirm.
- 3. will only disappear from the LCD if the regular call block (see 1. And 2.) is also set to OFF.

TECHNICAL DETAILS			
Free Field Range ndoor Range Handset Battery Life average values)	Up to 300 meters* Up to 50 meters* 18 hours talk time** 300 hours standby**		
Number of Handsets	Up to 4		
ntercom Mode	Yes		
Three-Way Conference 1 outside correspondent + 2 internal correspondents)	Yes		
Electrical Connection/Base Mains Adaptor/Charger	Base main adaptor & Charger adaptor: Model No.: AT-536B-060045B or 1-CHEUA451-081 Input: 100-240 V/50-60 Hz/0.2 A Output: 6 V DC/450 mA, 2.7W Only use the adaptors supplied with telephone. Single-phase AC, excluding IT install defined by the EN62368-1 standard. Caution: The network voltage is classified as hazard by the criteria of this standard.		
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN62368-1 standard.		
3atteries	2pcs of AAA NiMH batteries – 2.4 V – 300 mA Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.		
Operating Temperature	From 5°C to 40°C		

- * Values may vary according to environment.
- ** Depending on initial battery charge

TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solutions
No dialing tone when pressing the key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another handset is used.	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the AC plug (remove and plug-in). C. Wait until the line is unoccupied.
"OUT OF RANGE" is displayed.	a. Base station out of range. b. Base station not connected to mains.	a. Reduce the range. b. Connect base station to mains.
The call does not work.	Service not activated or wrong operator.	Check your Subscription with network.
No display.	Empty batteries.	Recharge batteries.

Problem	Cause	Solutions		
Answering Machine				
The unit does not record new messages.	The answering machine is turned off. Message memory is full.	a. Turn on the answering machine. b. Erase unnecessary messages.		
The caller cannot leave a message.	a. The answering machine is turned off. b. Message memory is full.	a. Turn on the answering machine. b. Erase unnecessary messages.		
I cannot operate the answering machine remotely.	a. You are entering the wrong remote access code. b. You are pressing the dial keys too quickly. c. The answering machine is turned off.	a. If you forget the remote access code, reset to the default settings. b. Press each key firmly. c. Turn on the answering machine.		
While recording an outgoing message or listening to messages, the unit rings and recording stops.	A call is being received.	Answer the incoming call and try again to record your outgoing message later.		

GUARANTEE

Please read carefully the user quide included in this box. F860 Voice is an approved equipment in accordancewith the European regulations, attested by the CE marking. The product you just bought is a technological product, it must be handled with care.

Note: You have a legal warranty on this product in accordance with the regulations applicable to the sale of consumer goods in the country in which you made this nurchase

For any information regarding this legal warranty, please contact your dealer. Without prejudice to the legal guarantee of the products, ATLINKS guarantees that the product in this box conforms to its technical specifications contained in the user guide included in the this box, and this during a warranty period, counted from the date of purchase of the new product, the date on your invoice or ticket checkout where is indicated the name of your reseller, and equal to: Twenty four (24) months for the telephone, (Thirty six (36) months if the product was purchased in Spain or Portugal), excluding consumables, accessories and batteries. For any claim under this warranty during the warranty period, you must return the entire Product to your dealer, together with the proof of purchase, the invoice or receipt issued by your dealer, indicating the place of purchase and the serial number of the Product, following the appearance or discovery of the defect.

ATLINKS undertakes to repair any defective item due to a defect in design, material or workmanship, at its expense, or to replace, at its expense, by an identical or at least equivalent element in terms of functionalities and performance. If the repair or replacement is impossible under normal commercial conditions, the Product will be refunded or replaced by a Product equivalent. Within the maximum limit allowed by the applicable law, the product or element replacement, which maybe new or reconditioned, is warranted during a period of ninety (90) days from the date of repair or until the end date of the initial warranty period, whichever is the earlier greater than ninety (90) days, it being specified that any period of immobilization of the Product of at least seven (7) days will be added to the warranty period remaining to run. This warranty does not apply in the following cases:

- Installation or use not in accordance with the instructions in the guide of the user.
- Incorrect connection or abnormal use of the Product, especially with noncompatible accessories, as indicated in the user guide,
- Product opened, modified or replaced by means of non-approved parts, serial number deleted, illegible, damaged,
- Normal wear, including normal wear and tear on accessories, batteries and displays.
- Failure to comply with the technical and safety standards in force in the area geographical use,
- Product having suffered a shock or a fall,
- Product damaged by lightning, electrical surge, heat source or radiation, water damage, exposure to conditions of temperature, humidity or other excessive ambient conditions or any other cause external to the product.
- Negligence or faulty maintenance.
- An intervention, a modification or a repair carried out by a not authorized by

If the returned Product is not covered by the warranty, you will receive a quote from repair that will mention the cost of analysis and transportation costs that you will be charged if you want the Product returned to you. This quarantee is valid in the country in which you regularly purchased the Product, provided that the country is a member of the European Union. Subject to the legal provisions in force, all warranties other than described herein are expressly excluded.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, A) THIS WARRANTY IS EXCLUSIVE TO ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE PARTICULAR: B) ATLINKS DISCLAIMS LIABILITY FOR LOSS OR DETERIORATION OF DATA, LOSS OF USE LOST TO WIN, LOSS OF CHANCE, DEREVENUES OR INCOME, LOSS OF OPERATION, DAMAGES INDIRECT, CONSEQUENTIAL, CONSEQUENTIAL OR INCIDENTAL:

(C) ATLINKS LIABILITY IS LIMITED TO THE VALUE OF PURCHASE OF PRODUCT EXCEPT HEAVIL OR UNINTENTIONAL FAULT AND EXCEPT DAMAGE

The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations

SAFFTY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and beeasily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model. If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency. This is why we recommend that you also keep a conventional telephone one that doesn't require a power supply - as a backup.

! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement

ATLINKS hereby declares that the following models conform to the essential requirements and other applicable provisions of European directive 1999/5/EC.

ENVIRONMENT



This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.

The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions. - If the appliance is rented to you or left in your care, please contact your
- service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range. The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations.

Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!

CONFORMITY

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.alcatel-home.com

Average power per channel: 10mW Maximum Output Power (NTP): 24dBm Frequency Range: 1880-1900MHz



Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Legislation: Radio Equipment Regulations 2017 (SI 2017/1206). The full text of the UKCA declaration of conformity is available at the following internet address: www.alcatel-home.com



www.alcatel-home.com

ATLINKS Europe

28 Boulevard Belle Rive 92500 RUEIL-MALMAISON - France RCS Nanterre 508 823 747

ATLINKS UK Ltd

3rd Floor, Waverley House 7-12 Noel Street, London, W1F 8GQ - UK Company registration: 1380929

© ATLINKS 2022 - Reproduction prohibited. The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulation

Alcatel is a trademark of Nokia, used under license by ATLINKS

F860 Voice A/W no.: 10002399 Rev.0 (EN)