

Alcatel

E260 S VOICE /
E260 S VOICE DUO /
E260 S VOICE TRIO

EN | User Guide

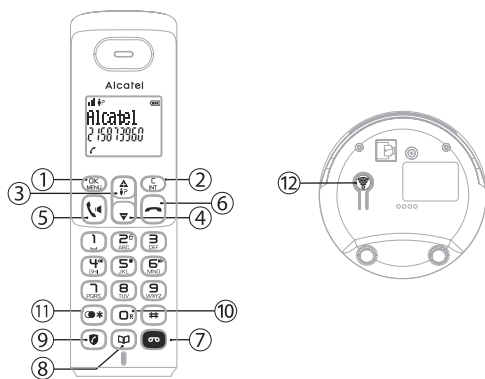 


Fig. 1.

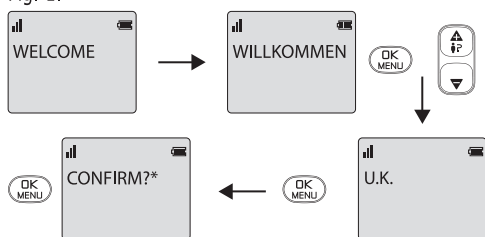 


Table. 1.

1. OK / ▲ or ▼ / HS SETTINGS / OK / MENU					
EN HS SETTINGS	DE MT-EINSTEL.	FR REGL. COMB	IT IMPOSTA PORT	ES CONF. TELEF.	EL ΠΡΩΤΟΚΟΛΛΟ ΑΚ
PT CONFIG. TERM	RU ОПЦИИ ТРУБКИ	NL HANDESET INST	PL USTAW WŁASNE	RO PROGR PERS	SRB PERSONALIZ.
HU K.B. BEALLIT					
2. ▲ or ▼ / LANGUAGE / ▲ or ▼ / OK / MENU					
EN LANGUAGE	DE SPRACHE	FR LANGUE	IT LINGUA	ES IDIOMA	EL ΓΛΩΣΣΑ
PT IDIOMA	RU ЯЗЫК	NL TAAL	PL JĘZYK	RO LIMBA	SRB JEZIK
HU NYELV					

ENGLISH

BEFORE 1st USE Connecting your phone:

- Connect plugs in corresponding sockets in the base station.
Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in the handset and place it on its base to start charging.

Before you start to use your telephone, charge batteries continuously for **15 hours**.

▲ Use only plug adapter and rechargeable batteries supplied with your phone.

After first time power up (base unit is connected to AC mains), welcome mode message will appear on the screen (Fig.1) .

Select the country where you are using the phone and confirm.

 
 
 
To select a different language, see Table 1.

HANDSET / BASE STATION KEYS

- MENU/OK key**
- Back/Correction/Intercom key**
- Navigation key/Call log access*/ Volume level increase**
- Navigation key/Volume level decrease**
- Talk key/Handsfree**
- Hang-up/Exit key**
- Direct access key to answering machine menu**
- Phonebook key**
- Call Block key***
- Recall (Flash) key**
- To access to operator services*
- Redial list access**
(in standby mode : press and hold)
- Paging key**
- To locate handset (short press) / to start registration procedure. See General Settings chapter.

*Subject to subscription and availability of the service from the fixed line operator.

DISPLAY ICONS

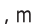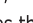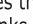- Battery level indicator
(full , mid , empty ).
- Indicates that phone is on line or held.
Icon blinks when receiving an incoming call.
- Indicates you have a new voice mail message*.
- Answering machine is on;
blinking in case of new message
- Indicates you have new missed calls*.
- Displays when the alarm clock is activated.
- Displays when handsfree is activated.
- Displays when ringer volume is turned off.
- Indicates that the handset is registered and within range of the base station.
Icon blinks when the handset is out of range or is searching for a base.

GENERAL SETTINGS


This phone can be customized according to your preferences, to access the different possibilities press:

- To customize handset (Alarm, Ring setup, ... Language, ... Date & Time): **▲** or **▼** select **HS SETTINGS** / **OK** / **MENU**.
- To change Pin code, Flash time: **▲** or **▼** select **BS SETTINGS** / **OK** / **MENU**.

For example, to change language or flashtime:

- OK** / **▲** or **▼** select **HS SETTINGS** / **OK** / **MENU** / **▲** or **▼** select **LANGUAGE** / **OK** / **MENU** / **▲** or **▼** select your desired language / **OK** / **MENU**.
- OK** / **▲** or **▼** select **BS SETTINGS** / **OK** / **MENU** / **▲** or **▼** select **FLASH TIME** / **OK** / **MENU** / **▲** or **▼** select **SHORT / MEDIUM** or **LONG** / **OK** / **MENU**.

To register a handset (if needed):

On main base, press and hold for **10s** the paging key  (number 12).











On the handset to be registered: press / **OK** / **MENU** / **▼** / select **REGISTRATION** / press **OK** / **MENU** / enter PIN code (default 0000) / press **OK** / **MENU**, handset is paired in few seconds.

USING THE PHONE

Receive and end a call

-  / 

Make a call


-  either before or after dialing your number.
- From redial list: Press  / **▲** or **▼** / .
- From call log list*: Press  / **▲** or **▼** / .
- From direct memories: press and hold on  or  in idle mode.
- From phonebook:  / **▲** or **▼** / .
- During a call, to activate/desactivate handsfree: .

To make an internal call

- If only 2 registered handsets: **OK** / **NT** / **▲** or **▼** select the handset number / **OK** / **MENU**.
- If more than 2 registered handsets: **OK** / **NT** / **▲** or **▼** select the handset number / **OK** / **MENU**.
- To ring all handsets to intercom: **OK** / **NT** / **▲** or **▼** select **CALL ALL** / **OK** / **MENU**.

To make a three-party conference call (with one external, two internals):

During call:

- Press / **OK** / **MENU** / select **INTERCOM** / **OK** / **MENU** / **▲** or **▼** select the handset number / **OK** / **MENU**.
- Press  on the called handset to answer.
- Press and hold for 2 seconds ***** on the calling handset to establish conference call.

PHONEBOOK AND DIRECT MEMORIES SETTINGS

To register in phonebook (50 entries)

OK / **MENU** / select **PHONEBOOK** / **OK** / **MENU** / select **ADD** / **OK** / **MENU** / enter name of contact / **OK** / **MENU** / enter number of contact / **OK** / **MENU** / **▲** or **▼** to select melody / **OK** / **MENU** / to save as **CONTACT**.

To register the direct memories in keys 1, 2, & 3

OK / **MENU** / **▲** or **▼** select **HS SETTINGS** / **OK** / **MENU** / **▲** or **▼** select **DIRECT MEM** / **OK** / **MENU** / **▲** or **▼** select one key (Key 1, Key 2, Key 3) / **OK** / **MENU** / enter the number / **OK** / **MENU**.

Notes:

- Phonebook is shared with duo, trio handsets.

ANSWERING MACHINE SETTING BY HANDSET

Set the answer mode

OK / **MENU** / **▲** or **▼** to select **ANS.MACHINE** / **OK** / **MENU** / **▲** or **▼** to select **TAM SETTINGS** / **OK** / **MENU** / to select **ANSWER MODE** / **OK** / **MENU** / **▲** or **▼** to select **ANSWER ONLY** or **ANS & REC** / **OK** / **MENU**.

Record a personalised outgoing message

OK / **MENU** / **▲** or **▼** select **ANS. MACHINE** / **OK** / **MENU** / **▲** or **▼** select **TAM SETTINGS** / **OK** / **MENU** / **▲** or **▼** select **OGM SETTINGS** / **OK** / **MENU** / **▲** or **▼** to select **ANSWER ONLY** or **ANS & REC** / **OK** / **MENU** / **▲** or **▼** select **RECORD MESS** / **OK** / **MENU** to start recording / **OK** / **MENU** to end recording.

Change the default outgoing message language (if needed)

OK / **MENU** / **▲** or **▼** to select **ANS.MACHINE** / **OK** / **MENU** / **▲** or **▼** to select **TAM SETTING** / **OK** / **MENU** / **▲** or **▼** to select **TAM LANGUAGE** / **OK** / **MENU** / **▲** or **▼** to select your preferred language / **OK** / **MENU**.

Set answer delay

OK / **MENU** / **▲** or **▼** to select **ANS.MACHINE** / **OK** / **MENU** / **▲** or **▼** to select **TAM SETTING** / **OK** / **MENU** to select **ANSWER DELAY** / **OK** / **MENU** / **▲** or **▼** to select **2-10 RINGS** / **OK** / **MENU**.

If you have subscribed to a voice mail service from your Operator, make sure to set shorter delay on your phone, so that your phone can answer and record a message.

ANSWERING MACHINE USE BY HANDSET

You can control the Answering Machine by short cuts on the keypad instead of going through the menu.

Turn the answering machine on or off

 / **▲** or **▼** to select **TAM ON/OFF** / **OK** / **MENU** / **▲** or **▼** to select **ON** or **OFF** / **OK** / **MENU**.

Playback/Delete messages/Others

 / **MSG PLAYBACK** / **OK** / **MENU** to start playback in handsfree mode. While you are listening to a message, press  to stop /  to go forward /  to go backward /  to delete message.

Answering machine menu can also be reached by: **OK** / **MENU** / **▲** or **▼** to select **ANS. MACHINE** / **OK** / **MENU**.

Remote access to answering machine

Dial your home phone number. While the answering machine is playing the outgoing message, press ***** and enter remote access code (default 0000).

CALL BLOCK OVERVIEW

This telephone is built-in with Basic Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring. Default setting of Basic Call Block in this telephone is **OFF** but you can enable it via your phone settings, as explained in the following paragraphs.

*This feature requires a subscription of Caller Line Identification service from your telephone service provider.

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to On. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
ANONYM	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous (to enable, see part 2).

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers registered in your blacklist will be blocked. You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing and before answering, press **OK** will terminate the call and offer you the option to register the number to the blacklist in one click. Then to confirm the registration of this number in the blacklist, press **OK**.
IMPORTANT : if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON*

- Press **OK**, press **▲** or **▼** to select **CALL BLOCK**.
- Press **OK**, press **▲** or **▼** to select **BLOCK SET.**
- Press **OK**, press **▲** or **▼** to select **ON**. OR
In idle mode, press **OK** to access **BLOCK SET.** directly. After you enable this option, the call block icon **OK** will be displayed on the LCD.

1.2. Add numbers to Blacklist

- In idle mode,
- Press **OK** key, **BLOCK SET.** is displayed.
 - Press **▲** or **▼** to select **BLOCKLIST**.
 - Press **OK**, press **▲** or **▼** to select **ADD**, press **OK**, enter number to be blocked, press **OK** to save.

NOTE : 2 more ways to add incoming and outgoing call numbers in Block list:

- From incoming call numbers
 - Press **OK**, press **▲** or **▼** to select **CALL LIST**.
 - Press **OK**, press **▲** or **▼** to select call list entry.
 - Press **OK**, press **▲** or **▼** to select **ADD to BLIST**.
 - Press **OK** to show selected number, press **OK** to save to **Block list**.
- From outgoing call numbers
 - Press **OK**, press **▲** or **▼** to select redial list entry.
 - Press **OK**, press **▲** or **▼** to select **ADD to BLIST**.
 - Press **OK** to show selected number, press **OK** to save to **Block list**.

1.3. Edit numbers in Blacklist

- In idle mode,
- Repeat step 1 and 2 in Section 1.2.
 - Press **OK**, press **▲** or **▼** to select **EDIT**, press **OK**, press **▲** or **▼** to select number to be edited, press **OK** to edit, and then press **OK** to save.

1.4. Delete numbers in Blacklist

1.4.1. Delete a number from blacklist

- In idle mode,
- Repeat step 1 and 2 in Section 1.2.
 - Press **OK**, press **▲** or **▼** to select **DELETE**, press **OK**, press **▲** or **▼** to select number to be deleted, press **OK**, to **CONFIRM?**

1.4.2. Delete all numbers from blacklist

- In idle mode,
- Repeat step 1 and 2 in Section 1.2.
 - Press **OK**, press **▲** or **▼** to select **DELETE ALL**, press **OK**, **CONFIRM?** is shown, and then press **OK** to confirm.

2. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

MENU	CALL BLOCK	BLOCK ANONYM	OFF*
			PRIVATE
			ALL

- Press **OK**, press **▲** or **▼** to select **CALL BLOCK**.
- Press **OK**, press **▲** or **▼** to select **BLOCK ANONYM**.
- Press **OK**, press **▲** or **▼** to select one of the options.

2.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you.

- In idle mode,
- Press **OK** key, **BLOCK SET.** is displayed, or Press **OK** to press **▲** or **▼** to select **CALL BLOCK**, press **OK** to show **BLOCK SET.**
 - Press **▲** or **▼** to select **BLOCK ANONYM**.
 - Press **OK**, press **▲** or **▼** to select **PRIVATE**, press **OK** to confirm.
 - OK** will be displayed on the upper side of LCD.

2.2. Block All Anonymous Calls

This mode will block all incoming anonymous calls, including private calls, international calls, pay phone and other out-of-area calls.

- In idle mode,
- Repeat step 1 and 2 in Section 2.1.
 - Press **OK**, press **▲** or **▼** to select **ALL**, press **OK** to confirm.
 - OK** will be displayed on the upper side of LCD.

2.3. Set Block Anonymous Calls OFF

- In idle mode,
- Repeat step 1 and 2 in Section 2.1.
 - Press **OK**, press **▲** or **▼** to select **OFF**, press **OK** to confirm.
 - OK** will only disappear from the LCD if the regular call block (see 1. and 2.) is also set to **OFF**.

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

For more information, you can download full user guide or get on-line assistance: www.alcatel-home.com

SAFETY

This telephone is not designed for Emergency calls when the main power fails. Do not use your telephone to notify a gas leak or other potential explosion hazard. Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT



This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.

The European Union has implemented a specific collection and recycling system for which producers are responsible.

Help us protect the environment in which we live!

CONFORMITY



Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU

declaration of conformity is available at the following internet address: www.alcatel-home.com
- Average power per channel: 10mW
- Maximum Output Power (NTP) : 24dBm
- Frequency Range : 1880-1900MHz

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Legislation: Radio Equipment Regulations 2017 (SI 2017/1206). The full text of the declaration of conformity is available at the following internet address: www.alcatel-home.com

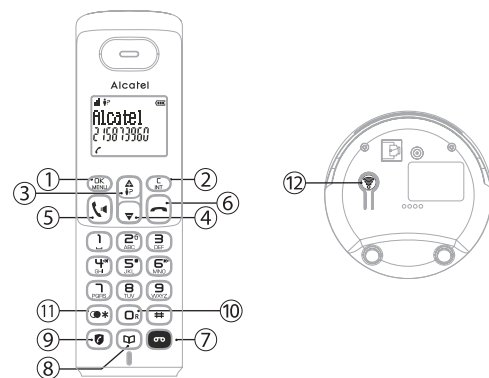 


Fig. 1.

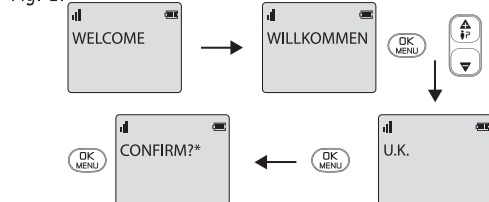


Table. 1.

1. OK / ▲ or ▼ / HS SETTINGS / OK	DE	FR	IT	ES	EL
HS SETTINGS	MT-EINSTEL.	REG. COMB	IMPOSTA PORT	CONF. TELER.	ΕΣ. ΠΡΟΜΕΤΕΞΕ ΑΚ
PT	RU	NL	PL	RO	SRB
CONFIG TERM	RU	OTLUPNI TPYBAH	HANDESET INST	USTAW WLASNE	PROGR PERS
HL	K.B. BEALLT				PERSONALIZ.
2. ▲ or ▼ / LANGUAGE / ▲ or ▼ / OK	DE	FR	IT	ES	EL
LANGUAGE	SPRACHE	LANGUE	LINGUA	IDIOMA	ΓΛΩΣΣΑ
PT	RU	NL	PL	RO	SRB
IDIOMA	ЯЗЫК	TAL	JĘZYK	LIMBA	JEZIK
HL	NYELV				

ATLINKS Europe
28 Boulevard Belle Rive
92500 RUEIL-MALMAISON France

ATLINKS UK Ltd
3rd Floor, Waverley House
7-12 Noel Street, London, W1F 8GQ UK

www.alcatel-home.com

Alcatel is a trademark of Nokia, used under license by Atlinks.

E260 S Voice/
E260 S Voice Duo/
E260 S Voice Trio_UK
A/W no.: 10002771 Rev.0 (EN)
Made in P.R.C.